

# Download Mac Laptop Manual Eject

Perhaps one of the quickest ways to eject a CD or DVD is to right-click on its desktop icon and select Eject from the pop-up menu. Some applications, such as iTunes and Disk Utility, have an eject command in a menu or toolbar. Launch the application and use the eject command to eject the CD or DVD. Use the Eject menu applet located in the Mac's menu bar. Restart your Mac while holding down the mouse button. This will usually prompt your Mac to force the CD to eject upon starting back up. If you use a traditional mouse with your Mac, make sure you're holding down the left mouse button. Use Disk Utility to open the CD tray. Manual Eject Stuck CD/DVD from a Mac (MacBook) In general a CD or DVD can be ejected on a Mac (MacBook) using the physical eject button or from the finder without any problems, but occasionally this don't work and the disc icon might disappear from your Desktop and you can't get the disc out of your computer. However, there is a trick you can try to extract the stuck disc. Restart your Mac. drutil eject drutil tray eject. If you have an external drive, you should try a third command: drutil eject external When Nothing Else Works. Restart your Mac while holding down the mouse or trackpad button. You may think it's not working, but keep holding the button down until your computer has fully restarted.